

Instruction Guide

ED100 | DVD/CD Drive



| | |
|---|---|
| Box Contents | 1 |
| What's in the Box? | 1 |
| Controls and Functions | 2 |
| Control Buttons..... | 2 |
| Instruction Guide | 3 |
| Connecting to your computer - Plug and Play | 3 |
| Precautions and Notes..... | 4 |
| Specification | 5 |
| Specifications..... | 5 |
| Warranty..... | 5 |
| Safety Information | 6 |

3 | year
warranty

Register your product for a FREE 3-year
warranty at www.oakcastle.co.uk

What's in the Box?


Oakcastle ED100 DVD/CD Drive

USB Cable

Instructions Guide



Control Buttons

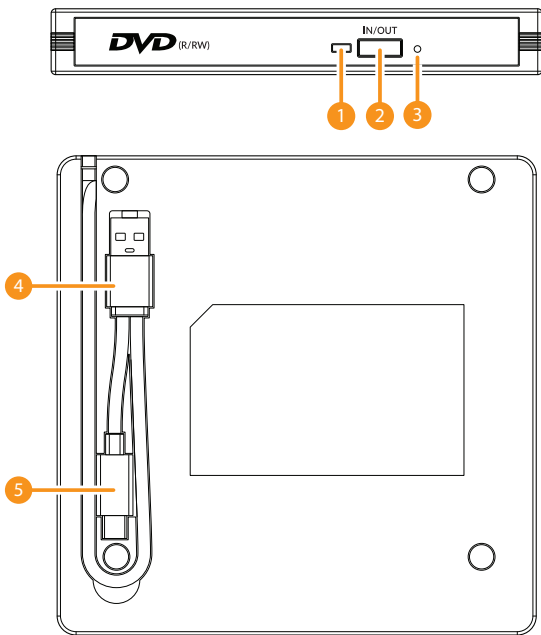

1. Indicator Light
2. Eject button
3. Emergency Disc Eject
4. USB-A Connector
5. USB-C Connector

Connecting to your computer - Plug and Play

1. Connect the USB cable to the USB port of your computer. The embedded USB cable features both USB Type-A (**Ref.4**) or USB Type-C (**Ref.5**) connectors. Either connector can be used to connect to your computer.
2. Open up the media player device installed on your computer and begin playing media.

Windows

For Windows systems, if the DVD/CD does not load automatically, open File Explorer. Right click on the disc icon and select 'Play with...' followed by your chosen media player program. For desktop devices, please plug the USB cable into the mainboard USB slot at the rear of your computer.

Windows 10 and above

If you are using Windows 10 or above, please install VLC Media Player in order to play CDs and DVDs. You can download VLC Media Player at the following web address: www.videolan.org/

Mac OS

To play a DVD/CD using Mac OS, select a media player program and load the disc.

Compatibility

Compatible with Windows XP/2003/Vista/7/8.1/10, Linux, Mac OS
Supported CD formats: DVD-ROM/-R/+R/-RW/-R/-R DLCD, CD-ROM/-R/-RW, VCD. Please note that this device is not compatible with Blu-Ray discs.

Precautions and Notes

- **Please do not place on unstable surfaces**
- **Please do not place device near strong magnetic objects**
- **Keep device steady on desktop**
- **Please do not look directly into the inside of the device as the laser may be harmful to the eyes**
- **Please do not place heavy objects on top of the device**
- **Please do not put any pressure on top of the device as this may damage the disc reading mechanism**

Notes

Please connect the device directly to the USB port of your computer. If you connect the device via a USB hub or an extended card, the device may not function correctly.

Please note that in order to ensure sufficient power supply to the device, the DVD/CD drive can not be inserted via a USB adapter.

In order to function without the requirement of downloading drivers, the operating system of your computer must have the ability to detect external devices.

Please note: in order to download the driver, your computer must be connected to the internet.

Specifications

| | |
|------------------------------|---|
| Maximum Readable Capacity | 8.5GB |
| Power Supply | DC 5V |
| Compatible Operating Systems | Windows XP/2003/Vista/7/8.1/10, Linux, Mac OS |
| Compatible CD Formats | DVD-ROM/-R/+R/-RW/-R DLCD, CD-ROM/-R/-RW, VCD |
| Connection types | USB 3.0/Type C, Type A |
| Hot Plugging/ Hot Swapping | Compatible |

Warranty

All products come with a standard 12 month warranty. All items must be registered on www.oakcastle.co.uk for the warranty to be valid. Once on the web page, use the menu to find "register your product". You will also be given the chance to extend your warranty for an additional 24 months, free of charge.

1. **Read these instructions.**
2. Keep these instructions. Instructions are also available for download at www.oakcastle.co.uk
3. Heed all Warnings
4. Follow all instructions
5. Do not clean the apparatus near or with water
6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Unplug this apparatus during light storms or when unused for long periods of time.
12. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in a way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to the rain or moisture, does not operate normally or has been dropped.
13. No naked flame sources, such as lit candles, should be placed on the apparatus.
14. Dispose of used electrical products and batteries safely according to your local authority and regulations.

ADDITIONAL WARNINGS

The apparatus shall not be exposed to dripping or splashing and no objects filled with liquid, such as vases, shall be placed on the apparatus. Main plug is used to disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the main mains completely, the mains plug should be disconnected from the main socket outlet completely. Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

RECYCLING ELECTRICAL PRODUCTS

You should now recycle your waste electrical goods and in doing so help the environment.



This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal when finished with.

IMPORTANT: Please read all instructions carefully before use and keep for future reference.



Risk of electric shock.
Do not open



Read all instructions carefully before use and keep for future reference



When servicing, use only identical replacement parts



CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN



ATTENTION

RISQUE D'ELECTROCUTION
NE PAS OUVRIR



IMPORTANT: Please read all instructions carefully before use and keep for future reference





Oakcastle

G R E A T B R I T A I N

www.oakcastle.co.uk