

Instruction Guide

F100 | Mobile Phone



Box Contents	1
Controls & Functions	2
Basic Operation	4
Instruction Guide	5
Messaging.....	5
Contacts and Calls	6
Settings	7
Multimedia and My files	8
Tools and Games	9
Profiles, Audio and Bluetooth	10
Specification	11
Warranty	11
Safety Information	12

3 | year
warranty

Register your product for a FREE 3-year
warranty at www.oakcastle.co.uk

What's in the Box?

Oakcastle F100 Mobile Phone


USB Cable

Instructions Guide

Sim Card Adapters




Control Buttons

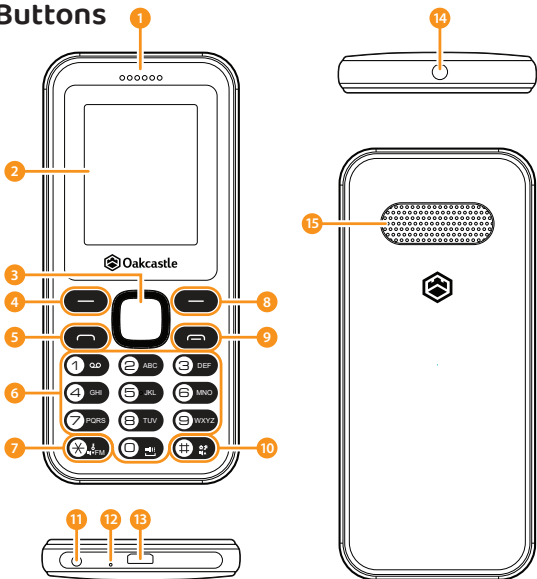

- | | |
|-------------------------|------------------------------|
| 1. Phone speaker | 9. On/off/end call |
| 2. Display | 10. # Key |
| 3. Navigation/OK button | 11. Headphone jack |
| 4. Left softkey | 12. Microphone |
| 5. Pick up call | 13. Charging/connection port |
| 6. Keypad | 14. Torch |
| 7. * Key | 15. Speaker |
| 8. Right softkey | |

How to Open the Phone

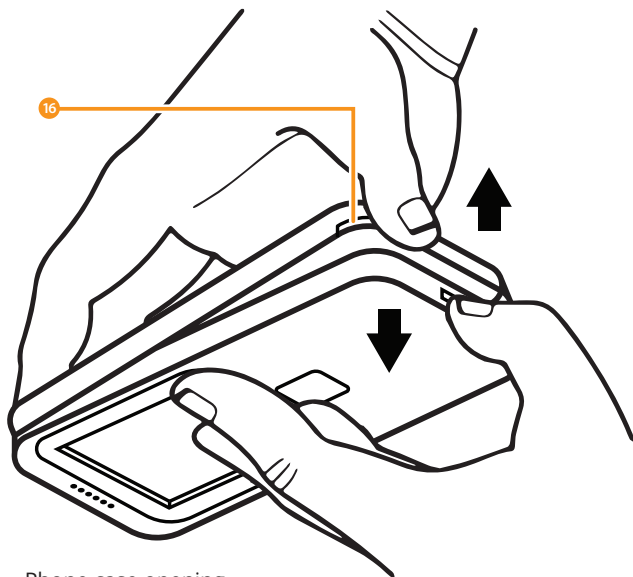

16. Phone case opening

Opening the F100

To open the F100 to remove or replace the battery or insert a SIM or SD card, place fingernails either side of the small phone case opening (Ref.16) to prise open the back case from the phone. There is a small indent in the casing on the bottom right of the phone. When the phone is brand new, it will take a moderate amount of force to open, but this will become easier with time.

Basic Operation

Power on/off

To switch on/off, press and hold the power button (**Ref.9**).

Shortcuts

Audio: Press up on navigation key (**Ref.3**).

Profiles: Press right on navigation key (**Ref.3**).

Alarm: Press down on navigation key (**Ref.3**).

New message: Press left on navigation key (**Ref.3**).

Change profile (Normal/Silent/Meeting/Indoor/Outdoor): Press and hold # key (**Ref.10**).

Torch on/off: Press and hold 0 (number 0 **Ref.6**).

FM Radio: Press and hold * key (**Ref.7**).

Voicemail: Press and hold 1 (number 1 **Ref.6**).

Sleep: Press End call key (**Ref.9**).

Charge

To charge the phone, use the cable provided to insert the micro USB connector into the phone (**Ref.13**) and insert the USB connector into a USB power supply. When the phone is fully charged (1.5h maximum), the screen will display 'Charging complete'.

Lock/Unlock

To lock/unlock the phone, press the left softkey (**Ref.4**) followed by the star key (**Ref.7**).

Emergency calls

To make an emergency call (999) (911) (112) it is not necessary to unlock the phone. Dial the number and press Send Call (**Ref.5**).

Default Password: 1234

Messaging

Write a message

To write a text message, either use the shortcut (press left of navigation key **Ref.3** from the main screen), or navigate to Messages from the main menu by selecting Menu (Press **Ref.4** + select Messaging, then select 1 - 'Write a message' by pressing **Ref.3**). To select a contact from your Contacts list, with the cursor on the Contacts line, press Enter (**Ref.3**) and select your chosen contact. Once selected, the contact will display a ticked box. To confirm, press the left softkey (**Ref.4**) followed by confirm (**Ref.3**), then assign the contact to your message by pressing confirm (**Ref.3**) once again.

Using the keypad

Mobile Phone keys correspond to the following characters:

1 - Punctuation , . ? ! ' " - @ : ; / _

0 - Insert space/number 0

- Input method settings

Abc/abc/ABC/123

* - Other punctuation

Press # (**Ref.10**) to see next page of punctuation

Press * (**Ref.7**) to see previous page of punctuation

To send a message once complete, press the Enter button (**Ref.3**).

Alternatively, press 'options' (**Ref.4**) followed by the Enter button (**Ref.3**).

Contacts and Calls

Add a new Contact

Method 1: Type in a phone number from the home screen, then press the Enter button (**Ref.3**) to select 'Add to Contacts'.

Method 2: To add a new contact, navigate to 'Contacts' from the main menu screen. Press the left softkey (**Ref.4**) to select 'Options', then select 'New' (**Ref.3**). You can choose whether to save the contact details to the Phone, the first SIM card, or the second SIM card. Once you have chosen between saving the contact details to the Phone, SIM1 or SIM2, you can edit the Contact's Name, Mobile number, and Contact group (Family, Friends, Business, Classmates).

Manage Groups

To manage groups, navigate to 'Groups' from the Contacts menu (Press right of Navigation key (**Ref.3**) until the 'Groups' tab is highlighted). From here, you can add Groups, add Contacts to Groups, or delete Contacts from Groups.

Make a call

To make a call, begin dialling a number using the keypad (**Ref.6**) from the home screen, then press the 'Send Call' button (**Ref.5**) to call the number.

Alternatively, select a Contact from your Contacts list and either press the 'Send Call' button (**Ref.5**), or highlight the number and press the Enter button (**Ref.3**).

Emergency calls

To make an emergency call (999) (911) (112) it is not necessary to unlock the phone. Dial the number and press Send Call (**Ref.5**).

Settings

Call Settings

Set Dual-SIM settings, call divert, call waiting, call barring, hide ID and other settings.

Phone Settings

Set Date & time, Language settings, Shortcut settings, Auto power on/off, Power management, Restore factory settings.

Please note that the default password to restore factory settings is 1234.

Display

Change wallpaper from memory card, Idle display settings, Contrast, Backlight, and Keypad backlight settings.

Security

Change PIN code settings, privacy settings, Auto keypad lock, Lock screen by end-key, Fixed dialing and Blacklist settings.

Connections

Change Network account, GPRS Service, Data connection settings, Network selection settings.

Multimedia and My files

Image, Video and Sound recordings

Store images, videos and sound recordings using an external SD card. You can upload images to the SD card that you can use as Contact profile pictures or phone wallpapers (only PNG and JPG files can be used for wallpapers). To create a sound recording, an SD card with available storage space must be inserted into the phone.

FM Radio

To use the FM Radio, navigate to FM radio from the home screen (select 'Multimedia' or 'FM Radio').

Change volume: Press up/down on the navigation key (**Ref.3**)

Scan to next radio station with good signal: Press left/right on the navigation key (**Ref.3**).

Auto search and save: Select 'Auto search and save' from options. The phone will automatically scan for stations with a good signal and save them to the Channel list.

Channel list: View a list of your saved stations.

Save: Save a station to your Channel list.

Manual search: Manually enter the frequency of the station you wish to listen to.

Open speaker: Loudspeaker enabled

Background play: Set the radio to play in the background.

Record: Make a recording of a broadcast.

Scheduled Record: Set a recording to start at a particular time.

Record file list: View a list of your recordings.

Help: Advice on using headphones with the phone.

Tool and Games

Tools

Calculator - Follow the diagram on the screen to use the functions. Use the Enter key (**Ref.3**) to use the + / - * and = functions. In Options, M+ /M- adds/subtracts the current value to memory register; MR recalls the current memory register value; MC clears the memory register.

Calendar - Set reminders or add events to the calendar.

Alarm - Set up to 3 alarms and choose between Once, Daily and Working days.

Bluetooth - Use Bluetooth to transfer files to/from your computer or phone. SD card required. Please see page 9 for further details.

Torch - Select to turn the torch on/off. Alternatively, press and hold 0 on the keypad (**Ref.6**).

World clock - View, add or delete date and time information across the globe.

Stopwatch - Start a timer. If you press back (**Ref.8**) without pressing Stop (**Ref.4**), the timer will continue.

Games

The F100 has been pre-loaded with 4 games for your entertainment.

Doodle Jump - 5 free games

Crossy Road - 5 free games

Bubble Party Mix - free

SUPER PET TWIST - free

Profiles, Audio and Bluetooth

Profiles

Choose from the preset profiles (Normal, Silent, Meeting, Indoor or Outdoor) or create your own profile for either SIM1 or SIM2 and adjust the volume of the Caller ringtone, Message ringtone, Alarm & calendar ringtone, Call volume, Power ringtone (ringtone volume), and adjust the Ring type (Ringtone, Vibrate, Silent, Vibrate then ring).

Please note that on Silent mode, games will still make sound. To turn off the sound of a game, it must be switched to 'off' in Sound settings for each game separately.

Audio

Use the F100's built-in Audio app to listen to music on the go, create playlists, shuffle and repeat songs, change Equalizer settings, and set audio files as ringtones. This app requires a memory card with pre-loaded audio files.

Bluetooth

To switch on Bluetooth, first navigate to the 'Tools' option in the main menu screen. Scroll down to 'Bluetooth' and select by pressing the enter button (**Ref.3**). Ensure that Bluetooth is switched on and 'Bluetooth visibility' is ticked. To pair with an Android device, switch on Bluetooth on your Android device and connect to the 'F100' from the list of available devices. Once paired, you can select files from the list under 'My files' in Menu. Select a file, select 'Options', and then select 'Send via Bluetooth'. Note: Compatible with Android devices only.

To send files from your computer to the F100 phone, first pair the devices. Then, under Bluetooth settings, follow the steps on your computer to transfer files via Bluetooth.

Specifications

Screen	1.77' 128*160 display
Flash Memory	32MB RAM + 32MB ROM
Bluetooth Version	Bluetooth 2.1
Bluetooth Compatibility	Windows + Android devices
Audio Format	Midi/AAC/MP3/AVI
Battery	600mAh
FM frequency	87.5-108MHZ
Micro-SD card	Compatible with micro SD cards up to 32GB
Photo format	PNG/JPG/3GP
Charging time	1.5 hours

Warranty

All products come with a standard 12 month warranty. All items must be registered on www.oakcastle.co.uk for the warranty to be valid. Once on the web page, use the menu to find "register your product". You will also be given the chance to extend your warranty for an additional 24 months, free of charge.

1. Read these instructions.
2. Keep these instructions. Instructions are also available for download at www.oakcastle.co.uk
3. Heed all Warnings
4. Follow all instructions
5. Do not clean the apparatus near or with water
6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions
7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
8. Protect the power from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
9. Only use attachments/accessories specified by the manufacturer.
10. Unplug this apparatus during light storms or when unused for long periods of time.
11. Refer all servicing to qualified service personnel.
Servicing is required when the apparatus has been damaged in a way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to the rain or moisture, does not operate normally or has been dropped.
12. No naked flame sources, such as lit candles, should be placed on the apparatus.
13. Dispose of used electrical products and batteries safely according to your local authority and regulations.


ADDITIONAL WARNINGS

The apparatus shall not be exposed to dripping or splashing and no objects filled with liquid, such as vases, shall be placed on the apparatus. Main plug is used to disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the main mains completely, the mains plug should be disconnected from the main socket outlet completely. Battery shall not be exposed to excessive heat such as sunshine, fire or the like.



RECYCLING ELECTRICAL PRODUCTS

You should now recycle your waste electrical goods and in doing so help the environment.

 This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal when finished with.

IMPORTANT: Please read all instructions carefully before use and keep for future reference.



Risk of electric shock.
Do not open



Read all instructions carefully before use and keep for future reference



When servicing, use only identical replacement parts



CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN



ATTENTION

RISQUE D'ELECTROCUTION
NE PAS OUVRIR



IMPORTANT: Please read all instructions carefully before use and keep for future reference





Oakcastle

G R E A T B R I T A I N

www.oakcastle.co.uk