



 OAKCASTLE

# DVD 175

---

 
USER MANUAL

## CONTENT

<b>BOX CONTENTS.....</b>	<b>1</b>
<b>USEFUL TIPS.....</b>	<b>2-3</b>
<b>CONTROLS AND FUNCTIONS</b>	
CONTROL BUTTONS.....	4
REMOTE CONTROL.....	5-7
<b>CONNECTIONS.....</b>	<b>8</b>
<b>SYSTEM SETUP.....</b>	<b>9-12</b>
<b>SPECIFICATIONS.....</b>	<b>13</b>
<b>TROUBLESHOOTING.....</b>	<b>15-18</b>
<b>WARRANTY &amp; SUPPORT.....</b>	<b>19</b>
<b>SAFETY INFORMATION.....</b>	<b>20</b>

**3** YEAR  
WARRANTY


Register your product online for a FREE 3 year  
extended warranty at: [www.oakcastle.co.uk](http://www.oakcastle.co.uk)

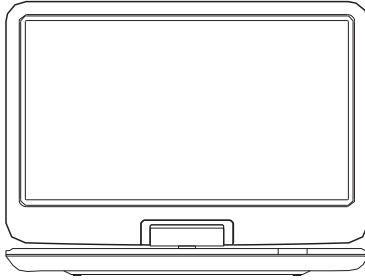


①



 
②

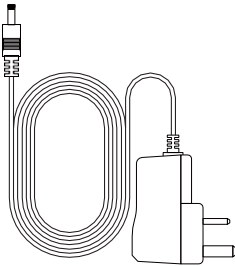

③

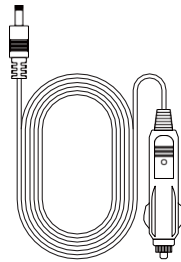 

④

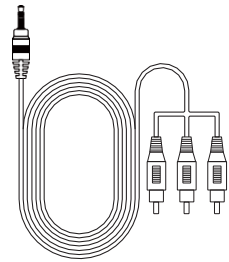 

⑤

① Portable Video Player

④ Car Charger

② Remote Controller

⑤ 3-in-1 AV Cable

③ AC Adapter

## USEFUL TIPS

 
1. **Battery:** DVD175 has a high-capacity built-in lithium rechargeable battery of 5000mAH which will last for 5 hours when the Battery is fully charged.

Please note: Battery should be fully charged for at least 6 hours before first time use on battery.


Before charging make sure DVD175 is switched off. The charging indicator LED will change from RED to OFF indicating that the battery has been fully charged. When the unit is ON, the LED turns GREEN.

DVD175 can also be powered with its Car Charger or AC Power adapter. If you choose to use DVD175 plugged on, you can simply plug and play with either of these 2 power cables included in the box.

2. **Screen Protector:** Device is supplied with a screen protector, which can be removed from screen for clearer picture

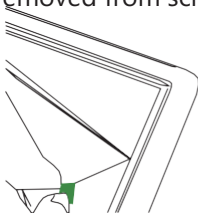

 3. **Laser Protection** There is a yellow card inside the player. Before you insert a disc, please remove the card. Please DO NOT touch the laser pick up or other parts with your hand.

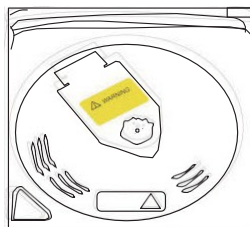


#### 4. Disc Format

<b>Disc Format Supported</b>	CD, DVD, DVD + R/-R, DVD + RW/-RW, VCD, SVCD, CD-R/RW
<b>Disc Format NOT Supported</b>	Blu-ray, HD DVD, Discs recorded in the AVCHD format, DVD-Audio, Version 1.0 of DVD-RW, DVD-ROM, CD-ROM, CDV, CD-G, SACD, Photo CD, DVD-RAM that cannot be removed from their cartridges, 2.6-GB and 5.2-GB DVD-RAM, PAL discs.

5. **Language Settings.** Press key [SET UP] → [OSD language]→ Change the display language. It is the same procedure for Audio, Subtitles and Menu.

 
## CONTROL BUTTONS

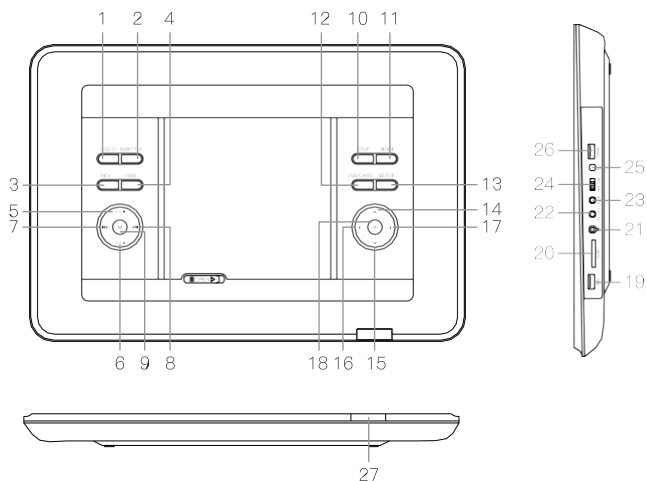

1	LCD On/Off	Press it and shut down the LCD screen
2	SUBTITLE	Press to select subtitles.
3	REV	Press to select the rewind speed, 2X, 4X, 8X, 16X, 32X, press "OK" to cancel.
4	FWD	Press to select the fast forward speed, 2X, 4X, 8X, 16X, 32X, press "OK" to cancel
5	VOL +	Press to increase volume, maximum to 20
6	VOL -	Press to decrease volume, minimum to 0
7	Previous	Press to return to the previous chapter
8	Next	Press to enter to the next chapter
9	LCD MENU	Press to quick adjustment "Brightness/ Contrast/ Hue/ Saturation", and press the direction key to select the value
10	STOP	<b>Press to stop current video. To restart, press OK button.</b>
11	MODE	Press to select "DVD" mode or "AV IN" mode
12	USB/CARD	Press repeatedly to switch among the input of the Disc, SD card, USB source.
13	SETUP	Press to enter the setup menu, then use the direction keys and OK to set the system menu.

14	UP	Direction Keys, up
15	DOWN	Direction Keys, down
16	LEFT	Direction Keys, left
17	RIGHT	Direction Keys, right
18	OK	In DVD play mode, press to pause/restart playback. In menu mode, press to enter the selected item
19	USB(USB Sticks, up to 32 GB)	
20	SD Card (up to 32GB)	
21	3.5mm Audio port	
22	AV OUT	
23	AV IN	
24	Power Switch	
25	Charging Port	
26	Power Indicator	


## REMOTE CONTROL

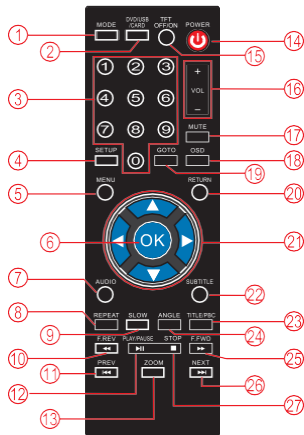 

Item	Function	Item	Function
1	Mode	14	Power
2	DVD/USB	15	TFT Off/On
3	Number Pad	16	Volume +/-
4	Setup	17	Mute
5	Menu	18	OSD
6	OK	19	Go to
7	Audio	20	Return
8	Repeat	21	Up/Down/Left/Right
9	Slow	22	Subtitle
10	Fast Rewind	23	Title/PBC
11	Previous	24	Angle
12	Play / Pause	25	Fast Forward
13	Zoom	26	Next
		27	Stop

## Replacing remote control battery

 
1. Open the remote control back cover.
2. Check for correct battery polarity when installing the battery.
3. Insert the two AAA model batteries and close the back cover.
4. When using the remote control, aim it at the remote sensor on the player.
5. When not using the remote control for a long time, remove the batteries and store them separately.

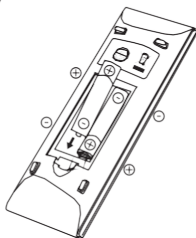



1. **MODE:** Select "DVD" mode or "AV IN" mode
2. **CARD/USB:** Switch between DVD, CARD and USB modes
3. **0-10+Number Keys:** Press number to input a DVD chapter or CD track (invalid for some discs)
4. **SETUP:** Show Setup menu directly (except the AV mode)
5. **MENU:** View the main menu on a loaded DVD
6. **DIRECTION BUTTON**  
Selection/Enter, Frame-by-frame
7. **AUDIO:** Press to switch left and right channels
8. **REPEAT:** Repeat the loaded disc
9. **Slow: slow down the playback**
10. **Fast Forward/Fast Rewind:** Select fast forward/rewind speed
11. **PREV/NEXT:** Press to play previous chapter/title/track
12. **PLAY/PAUSE:** Play or pause the audio/ movie playback. Confirm the selection or press it to select the file to play
13. **Zoom:** Short press to select 2X, 3X, 4X, 1/2, 1/3
14. **POWER:** Turn the unit on and off
15. **LCD ON/OFF:** Press it and shut down the LCD screen
16. **VOL +:** Increase volume, maximum to 20
17. **MUTE:** Mute the sound (Press again to activate the sound)
18. **OSD:** Display audio and video information such as title, play time, etc.
19. **GOTO:** Press to go to a specific time index/title/chapter
20. **RETURN:** During DVD play, press this key, to main menu
21. -To select: Press up, down, left, or right ([▲, ▼, ◀, ▶])  
-To enter: Press [OK]  
-Frame forward/ Frame backward: (while paused) press left or right ([◀, ▶])
22. **SUBTITLE:** Change subtitle mode
23. **TITLE MENU:** All program titles can be displayed
24. **Angle: adjust the angle of video**


## Range of use

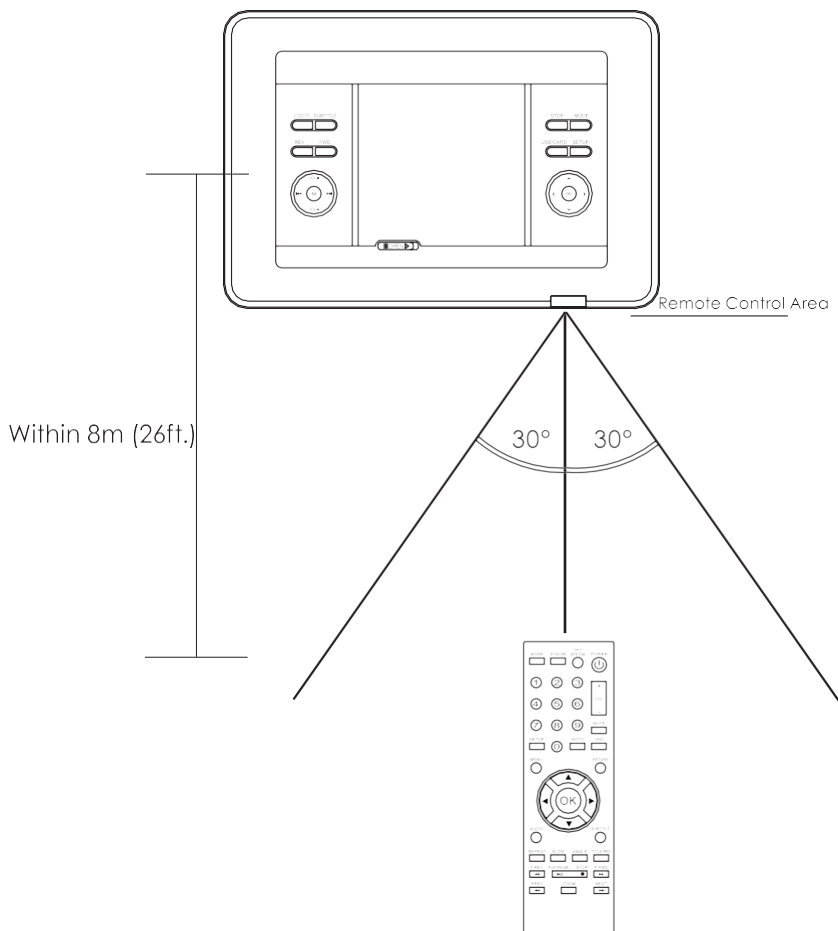 

The distance and angles are approximate.  
Within 8m (26ft.) in front  
Within 30 degrees angle either left or right

## CONNECTIONS
 
### Connect to TV



## Power Supply & Charge

- **Connect to mains power supply with AC Adaptor**, to play using mains power supply or to charge internal battery. Battery charge will show as red light on front panel. When fully charged, the red light will dim

Note - When plugged on to the mains the DVD player will also charge the battery while playing.

- **Connect to car power supply with Car Adaptor**, to power device using car power supply or to charge internal battery. Battery charge will show as red light on front panel. When fully charged, the red light will dim.

Note - When plugged on to the mains the DVD player will also charge the battery while playing.

 
- **Internal Battery Power** – If the DVD player battery is fully charged, do not connect the device with AC Adaptor or Car Adaptor. The DVD player will play using its internal charged battery. When battery level is running low, an icon indicating the battery level will flash on the DVD player screen.

To maintain power supply when the battery icon is flashing, connect the DVD player with AC Adaptor or Car Adaptor for charging supply, and to charge battery.

## SYSTEM SETUP

### Menu Operation

1. Press **[SETUP]** on the remote control or on the unit to access the setup menu.
2. Press **[LEFT]** / **[RIGHT]** to select an item. The submenu of the selected item will be instantly shown.
3. Press **[UP]** / **[DOWN]** to select an item in the submenu, then press **[OK]** / **[ENTER]** to enter. Use **[UP]** / **[DOWN]** to select an option, then press **[OK]** / **[ENTER]** to confirm it or press **[LEFT]** to cancel.
4. Press **[UP]** / **[DOWN]** to continue to set other items in the to access the setup menu.
5. Press **[LEFT]** to go back to the superior menu of the current one.
6. Press **[SETUP]** again and press **[ENTER]** / **[OK]** to exit the setup menu.

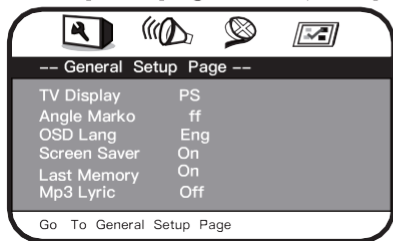

### General Setup Page

#### [TV Display]

1. 4:3 Normal / PS PANSCAN  
If the unit is connected to a conventional TV set, the wide-screen image will be displayed on the screen in its native aspect ratio with some part on the left and right cut off.
2. 4:3 Normal / LB LETTERBOX  
If the unit is connected to a conventional TV set, the wide-screen image will be displayed in its native aspect ratio with black borders on the top and the bottom side.
3. 16:9 wide  
Select this option if the unit is connected to a wide-screen TV set. The wide-screen image will be displayed in full screen in its native aspect ratio while the 4:3 image will be stretched out horizontally to fit in the screen.

**[ANGLE MARK]**

1. Set this item to ON. When a disc encoded with multiple camera angles is playing, the angle mark will display on the screen. Then you can view the video of different camera angles by pressing [ANGLE] on the remote control.
2. Set this item to OFF to disable this function.  
**NOTE:** This function only works with those discs encoded with multiple camera angles.

**[OSD LANGUAGE] (on-screen display language)**

Set this on-screen display language in this item.

**[SCREEN SAVER]**

1. ON: If the image remains motionless on the screen, for several minutes, a screen saver will appear on the screen. You can press any key or button to wake it up.
2. OFF: Turn off the screen saver function.

 
**[LAST MEMORY]**

1. ON: Each time you turn off the unit or stop the disc, it will memorize the last play duration. Next time you turn on the unit and play the same disc, the unit will play from that memorized point.
2. OFF: Disable the last memory function.

**[MP3 LYRIC]**

If you want to show the lyrics of a song, please load lyrics and music as the same name in a USB or Memory card before performing this function.

1. Choose MP3 file.
2. Download the corresponding lyrics with the extension ".lrc" from the Internet or create it with lyric file editor (not included).
3. Rename the lyrics file. Make sure that the lyrics filename is the same as the music file name.

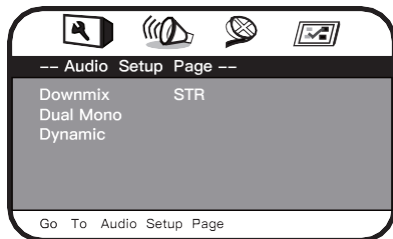


## Audio Setup Page

The Audio menu allows you to change the audio setup of the DVD.

**[Down mix]** Set down mix to LT/RT, Stereo.

**[Dual Mono]** Set down Stereo, L-Mono, R-Mono or Mix-Mono.

 **[Dynamic]** Full 3/4, 1/2, 1/4, OFF

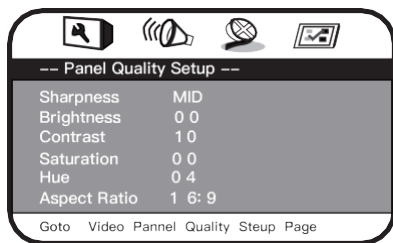

## Panel Quality Setup

The video menu allows you to change the display properties of the DVD.

**[Sharpness]** Adjusts the screen sharpness.

 
**[Brightness]** Adjusts the screen brightness.

**[Contrast]** Adjusts the screen contrast.

**[Saturation]** Adjusts the screen saturation.

**[Hue]** Adjusts the screen hue.

**[Aspect Ratio]** Setup panel display to 16:9 or 4:3.

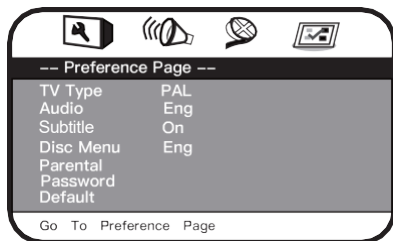

## Preference Page

The preference menu option allows you to adjust the default DVD disc setting. (The setting is only available when no media is inside the unit.)

**[TV Type]** Set TV Type to PAL, AUTO, or NTSC.

**[Audio]** Set the default audio language.

**[Subtitle]** Set the subtitle language.

**[Disc Menu]** Set the disc menu language.

**[Parental]** When setting a rating level, a password screen is shown. Follow the on-screen instructions. Do not forget your password.

**[Password]** Enter the default password "0000" then set your password.

**[Default]** Return the portable DVD to factory default beyond the maximum output of the speaker in sound effects processing.

## SPECIFICATIONS

### Supported format for different files

AV	File	Supported Format
	<b>Compatible Disc</b>	CD-R, CD-RW, VCD, SVCD, CVD, DVD±R, DVD±RW
	<b>Audio</b>	MP3,WMA,OGG
	<b>Video</b>	AVI, MPG, VOB, FLV, RMVB (Resolution must be within 720*576)
	<b>Picture</b>	JPG
	<b>E-book</b>	TXT(Code: ANSI)

Compatible DISC	CD, DVD, CD-R(RW), DVD±R, DVD±RW, VCD, SVCD(RW)
Frequency response	20HZ to 20KHZ
Video output	1 Vp-p75 Ohm unbalanced
Audio output	1.4 Vrms/10 kohm
Dynamic range	Better than 85dB
Laser	Semiconductor laser, Waver length:650
Power source	DC9-12V 1A
Battery Type	Li polymer



**TROUBLESHOOTING**

Before contacting the customer service, please kindly check by yourself with the following chart.

<b>Troubleshooting</b>	<b>Solution</b>
<b>The player can't read discs</b>	<ul style="list-style-type: none"><li>• Please clean the laser and DVDs with the alcohol first.</li><li>• Ensure the disc is in the right format for our DVD player. Our player doesn't support Dolby, pirate, burnt and blu rays DVDs.</li></ul>
<b>The player doesn't work</b>	<ul style="list-style-type: none"><li>• Make sure the power switch has been set to the "ON" position.</li><li>• Check connections to the AC adaptor or battery pack.</li><li>• Check the status of the indicator light. Under the premise of power connection, if it's on, there is a problem with the motherboard; if it's off, there is a problem with the motherboard or power adapter.</li></ul>
<b>Picture is distorted</b>	<ul style="list-style-type: none"><li>• The disc might be damaged. Try another disc.</li><li>• It is normal for some distortion to appear during forward or reverse scanning.</li></ul>

<b>The player sound is too low.</b>	<ul style="list-style-type: none"><li>• Check that the two speakers of the player are working properly, cover one speaker with your hand, and check if the other speaker is sounding.</li><li>• Check whether the disc you put in meets the specifications. Our player does not support DTS, which is the audio track of Dolby Disc. Please try another disc(not pirate, burnt, Dolby and Blu-ray discs) to hear whether it will play louder.</li></ul>
<b>No sound or distorted sound</b>	<ul style="list-style-type: none"><li>• The speaker is off if headphones are connected.</li><li>• Make sure your DVD is placed properly and all cables are securely connected into the appropriate jack.</li><li>• Audio may not be output due to how files were created.</li></ul>
<b>Can't advance through a movie</b>	<p>You can't advance through the opening credits and warning information that appears at the beginning of movies because the disc is programmed to prohibit that action.</p>

**Other problem**

Static discharges or other external interferences can cause the DVD player to malfunction. When this happens, disconnect the power plug and plug it back in. If the problem happened again, disconnect the device from main power and contact Customer Service or a repair shop.

**SUPPORT**

Thank you for purchase of Oakcastle portable DVD175  
Please follow the guidance of the manual to set up your device and enjoy its fantastic features. If you require further assistance with your new device, please contact our support team on the Oakcastle website: <https://www.oakcastle.co.uk/support>

**WARRANTY**

Register your product at [www.oakcastle.co.uk](http://www.oakcastle.co.uk) within 30 days of purchase to activate your extended warranty. Terms and conditions applies .


1. Read these instructions.
2. Keep these instructions. Instructions are also available for download at [www.oakcastle.co.uk](http://www.oakcastle.co.uk)
3. Heed all Warnings
4. Follow all instructions
5. Do not clean the apparatus near or with water
6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions
7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
8. Protect the power from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
9. Only use attachments/accessories specified by the manufacturer.
10. Unplug this apparatus during light storms or when unused for long periods of time.
11. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in a way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to the rain or moisture, does not operate normally or has been dropped.
12. No naked flame sources, such as lit candles, should be placed on the apparatus.
13. Dispose of used electrical products and batteries safely according to your local authority and regulations.


### ADDITIONAL WARNINGS

The apparatus shall not be exposed to dripping or splashing and no objects filled with liquid, such as vases, shall be placed on the apparatus.


Main plug is used to disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the main mains completely, the mains plug should be disconnected from the main socket outlet completely.


Battery shall not be exposed to excessive heat such as sunshine, fire or the like.


 **RECYCLING ELECTRICAL PRODUCTS**  
You should now recycle your waste electrical goods and in doing so help the environment.

 This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal when finished with.

**IMPORTANT:** Please read all instructions carefully before use and keep for future reference.

 Risk of electric shock.  
Do not open

 Read all instructions carefully before use and keep for future reference

 When servicing, use only identical replacement parts



**CAUTION**

RISK OF ELECTRIC SHOCK  
DO NOT OPEN



**ATTENTION**

RISQUE D'ELECTROCUTION  
NE PAS OUVRIR



**IMPORTANT:** Please read all instructions carefully before use and keep for future reference





**OAKCASTLE**

[WWW.OAKCASTLE.CO.UK](http://WWW.OAKCASTLE.CO.UK)