



DAB10

USER MANUAL

 
What's In The Box?	3
Controls And Functions	4
Instructions Guide	6
Basic Operation	6
Storing & Recalling Radio Stations (Presets).....	7
DAB/DAB+ Radio.....	8
FM Radio.....	9
Bluetooth Mode.....	11
Time, Date & Alarm Settings.....	12
Sleep Timer.....	14
Radio Settings Menu.....	15
Troubleshooting	16
Specifications	17
Warranty	17
Warning & Safety Information	18

3 year
Warranty


Register your product online for a FREE 3 year
extended warranty at: www.oakcastle.co.uk

What's in the Box?

- A. Oakcastle DAB10 Radio
- B. USB Type C Power Adaptor
- C. User Manual

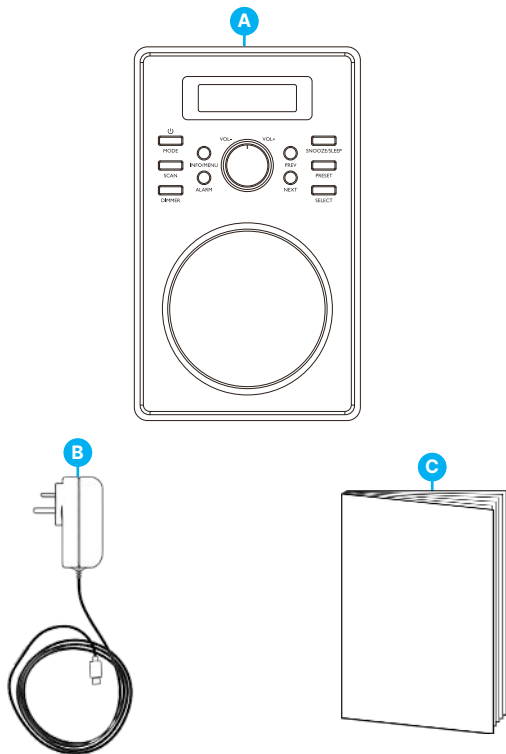


Front View

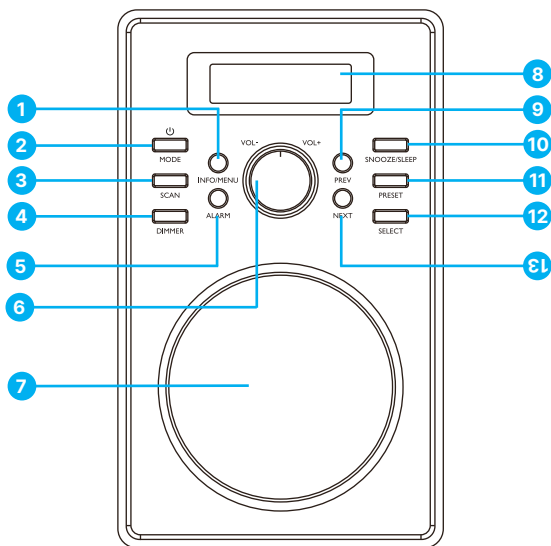 

- | | |
|-------------------------|-------------------|
| 1. Info/Menu | 8. Display Screen |
| 2. Power, Standby /Mode | 9. Previous |
| 3. Scan | 10. Snooze/Sleep |
| 4. Dimmer | 11. Preset |
| 5. Alarm | 12. Select |
| 6. Volume -/+ | 13. Next |
| 7. Speaker | |

 Back View

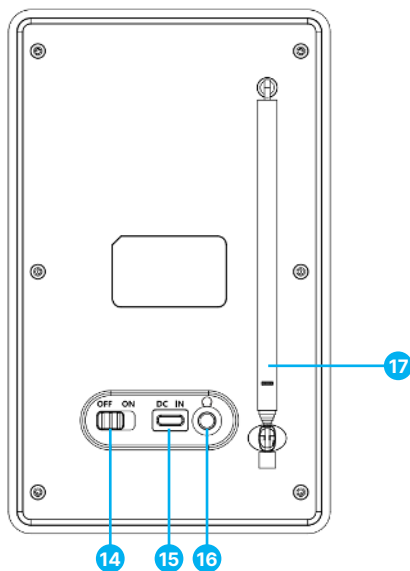

- 14. Off/On Switch
- 15. USB Type C Power Adaptor port
- 16. Headphone Jack
- 17. Radio Antenna

PLEASE NOTE: All (Ref.) refer to Page 4-5 controls and functions mapping guide.

Product Set-Up

Remove the packaging and prepare the **Oakcastle DAB10** radio for use. Position the radio where you have the best radio signal reception and fully extend the antenna (Ref.17) to ensure the strongest possible signal.

Connect the radio to mains power . Insert the USB Type-C cable end into the port (Ref.15) located at the back of the radio, then connect the plug to a wall socket.

Switch the radio on using the **Radio Power Switch** located at the back of the unit (Ref.14). The screen will display “Welcome to Digital Radio.” Press the **Power, Standby/Mode** button (Ref.2) to begin the setup process.

On first use, you will be asked to select your preferred language. Using the 'PREV or 'NEXT' buttons (Ref.9/13) choose your language from the list and confirm by pressing the **SELECT** button (Ref.12). The radio will then automatically begin scanning for available DAB stations in your area. Once the scan is complete, the radio will start playing the first found DAB station with good signal.

***Please note :** If the radio buttons do not function, it is likely because the selected language was not confirmed by pressing the **SELECT** button (Ref.12). Please complete this step, as it is mandatory during the initial setup.*

Switch the radio ON/OFF

To fully power the radio on or off, use the switch button located at the back of the radio (Ref.14).

Standby Mode

To manually set the Little Shelford into **Standby mode**, press and hold the '**Power, Standby/Mode**' button (Ref.2) for three or four seconds. Press and hold the same button again for three seconds to power on and resume playing.

Radio display brightness

Press the 'Dimmer' button (Ref.4) repeatedly to change display brightness.

The display screen will dim automatically after 10 seconds if left in standby or working mode.

Headphone Jack:

For private listening, you can use wired headphones (not included) with a 3.5 mm jack which can be inserted into its port at the back of the radio (Ref.16).

The **Oakcastle DAB10** offers **40 preset slots** available in each radio mode (FM and DAB). These are referred to as presets and allow you to save your favourite stations for quick access at any time.

Storing Radio Stations in FM or DAB radio mode (Presets)

To save a station to the preset list:

- While the station is playing, press and hold the **Preset** button (**Ref.11**) for two-three **seconds** to open the **Preset Store** list
- The radio display will show a list with the heading **Preset Store**, followed by available preset slots labelled **X: (Empty)** (where "X" represents the slot number).
- Once the list appears, release the '**Preset**' button (**Ref.11**) and use the '**PREV**' or '**NEXT**' buttons (**Ref.9/13**) to scroll through the list. Select an empty preset slot. then press the '**SELECT**' button (**Ref. 12**) to save the station.
- The radio will confirm the action with the message **Preset 'X' Stored**.

Please note:

*If, after selecting a slot, the radio displays **Preset Empty**, it means you are in the Recall Presets list instead of the Store Presets list.*

*To fix this, press and hold the **Preset** button again to re-open the **Store Presets** list.*

*If a station is already saved in a preset slot, it will be **overwritten** when you save a new station to that same slot.*

Recalling a Stored Radio Station in FM or DAB radio mode (Preset)

To recall a saved station:

- Set the radio to FM or DAB mode. The last played station will begin playing automatically.
- Briefly press the '**Preset**' button (**Ref.11**) to open the **Recall Presets** list.
- The radio screen will display the list with all saved stations. Use the '**PREV**' or '**NEXT**' buttons (**Ref.9/13**) to scroll through your saved stations (1–40).
- When the desired station is highlighted, press '**SELECT**' button (**Ref.12**) to begin playing it.

Please note:

If the Recall Presets list shows all slots as empty, you will need to save stations again before using the recall list.

In FM mode, once an automatic scan is completed, the recall list will automatically populate with all stations found.

Fully extend the antenna (**Ref.17**) to ensure the best possible signal reception before scanning, then switch the radio on.

- Press the '**Power, Standby/Mode**' button (**Ref.2**) repeatedly to select **DAB**, then press '**SELECT**' button (**Ref.12**) to enter DAB Radio Mode.
- On first use, the radio will **automatically scan** and save available DAB/DAB+ stations to the **Stations List**. The clock will sync with the broadcasting station.
- To enter and browse the station list, press the **PREV** or **NEXT** buttons (**Ref.9/13**) to scroll through the available stations. Then press the **SELECT** button (**Ref.12**) to confirm your choice and start playing the selected station.
- To **manually scan** or **rescan**: press the '**Scan**' (**Ref.3**). The radio will start processing a new DAB scan and create a new Stations list.
- Alternatively, press and hold the **Info/Menu** button (**Ref.2**) for three seconds to enter the **Set Menu**. Navigate to **Full Scan**, then press the **SELECT** button (**Ref.12**) to start the scan.

Storing & Recalling Radio Stations (Presets)

To store or recall radio stations in DAB Mode, please follow the instructions on page 7.

Station Information for DAB/DAB+ Radio

When listening to a DAB/DAB+ radio station with a good signal, press the **Info/Menu** button (**Ref.1**) repeatedly to cycle through the available programme information.

Signal Strength : showing the radio station signal strength

Signal Error Rate : Indicates the signal error rate.

Bit Rate: Shows the data rate at which the signal is transmitted.

Channel and Frequency: Displays the station's transmission channel number and frequency band.

PTY (Programme Type): Shows the type or description of the programme provided by the DAB station.

Time and Date: Displays the time and date information supplied by the broadcaster.

Dynamic Label Segment (DLS): Shows scrolling text information provided by the broadcaster.

Fully extend the antenna (**Ref.17**) to ensure the best possible signal reception before scanning, then switch the radio on.

- Press the **Power/Standby/Mode** button (**Ref.2**) repeatedly to select **FM**, then press the '**SELECT**' button (**Ref.12**) to enter FM Radio Mode.
- At first use in FM Mode, the radio will display the FM frequency **87.5 MHz** on the screen.
- To scan for available stations with a good signal, press the **Scan** button (**Ref.3**) to begin scanning and saving the FM stations available at your location. Once the automatic scan is completed, the radio will start playing the first found station with a good signal.
- To access the list of stations found and saved during the automatic scan, short press the **Preset** button (**Ref.11**) to open the **Recall Presets** list. Using the '**PREV**' and '**NEXT**' buttons (**Ref.9/13**), go through the list. Select the station you want to play, then press the '**SELECT**' button (**Ref.12**) to start playing.
- To perform a new automatic full scan, press the **Scan** button (**Ref.3**). When processing a new scan, the saved presets will be erased and replaced with the new ones automatically.

Manual scan the FM Radio band

- Before processing a new scan, press and hold the **Info/Menu** button (**Ref.1**) for 2–3 seconds to enter the **Set Menu**. Use the '**PREV**' and '**NEXT**' buttons (**Ref.9/13**) to navigate to **Scan Settings**, then enter to select your scan preference: **Strong Stations Only** or **All Stations**. Choose one of these and confirm by pressing the '**SELECT**' button (**Ref.12**). Process a new scan for radio stations as per your selection.
- To scan down the frequency band, press and hold the '<<' button (**Ref.3**) for two seconds. To scan up the band, press and hold the '>>' button (**Ref.4**).
- To manually fine-tune radio stations or scan up/down the FM band by 0.05 MHz, short press the '<</'>>' buttons (**Ref.3/4**).
- To listen to a specific frequency quickly, press and hold the '>>>' button (**Ref.4**) to search up the bandwidth and hold the '<<<' button (**Ref.3**) to search down.

Stereo and Mono

When in FM mode, press the **Enter/Snooze** button (**Ref.5**) to switch between Stereo and Mono.

Storing & Recalling Radio Stations (Presets)

To store or recall radio stations in FM Mode, please follow the instructions on page 7.

Station Information for FM Radio

When listening to an FM radio station with a good signal, press the **Info/Menu** button (**Ref.8**) repeatedly to view different programme information:

- **PTY (Program Type):** Shows the type and description of the program provided by the FM station.
- **Signal Strength:** Displays a signal bar indicating the strength of the current station.
- **Time and Date:** Displays the current time and date.
- **Frequency:** Displays the station's transmission frequency.
- **Audio Type:** Displays the audio type of the station (Stereo or Mono).
- **Radio Text:** Displays scrolling text information supplied by the broadcaster.

***Please note:** In FM mode, this station information is available only if the FM station you are listening to broadcasts this data.*

Bluetooth Pairing

- The Oakcastle DAB10 Radio can be paired via Bluetooth with devices such as a phone, tablet, or CD player to play audio through the radio speaker.
- Press the '**Power, Standby/Mode**' button (Ref.2) repeatedly to select **Bluetooth**, then press the **SELECT** button (Ref.12) to enter this mode.
- On your Bluetooth device, ensure Bluetooth is enabled. '**Oackcastle DAB10 Radio**' should appear in the list of available devices. Select it to connect.
- Once connected, scrolling text '**BT connected**' will appear on the radio screen. You can now play audio from your device through the radio speaker. Adjust the volume on both the device and the radio as needed.

Radio Buttons in Bluetooth Mode

- Use the **PREV or NEXT** buttons (Ref.9/13) to skip to previous or next audio track.
- Use the **SELECT** button (Ref.12) to pause or resume playback.
- Use the **Volume +/-** on your device, and radio to increase/decrease the volume level.

Unpairing the Radio

- Press and hold the **SELECT** button (Ref.12) for 4 seconds, or
- Remove the device from the paired device list on your Bluetooth device.

Pairing a New Device

- To pair with a new device after disconnecting, repeat the pairing steps.

Reconnecting a Previously Paired Device

- To reconnect with a previously paired device after powering on, enter Bluetooth mode and wait three seconds.

Important Notes

*The **Oackcastle DAB10 radio cannot be paired with Bluetooth earbuds, headphones, or external speakers.***

If no audio is received from the paired device for 15 minutes while in Bluetooth (BT) mode, the radio will automatically switch to Standby mode.

*To exit Standby mode, press and hold the **Power, Standby/Mode** button (Ref.2) for two, three seconds.*

Clock and Date Settings

Setting the Time and Date Automatically

When the radio is set to **DAB Mode** and starts playing a station with strong signal, the time and date are automatically updated. If this does not happen, or if you wish to adjust the time and date manually, follow the steps below:

Setting the Time and Date Manually

- Ensure the unit is in working mode (e.g., listening to DAB/FM Radio, BT).
- Press and hold the **Info/Menu** button (Ref.8) for two seconds to open the 'Set Menu'.
- Use the **PREV** or **NEXT** buttons (Ref. 9/13) to navigate to **Time/Date**, then press **SELECT** button (Ref.12) to enter.
- The **hour will flash**. Use **PREV** or **NEXT** buttons (Ref. 9/13) to adjust the hour, then press **SELECT** button (Ref.12) to confirm.
- Use **PREV** or **NEXT** buttons (Ref. 9/13) to set the minutes, then press **SELECT** button (Ref.12) to confirm.
- The **year will flash**. Use **PREV** or **NEXT** buttons (Ref.9/13) to set the correct year, then press **SELECT** button (Ref.12)
- Repeat the process for the month and date, using << or >> and confirming with **Enter/Snooze**.

Please Note: When the radio is set to DAB Mode the time and date are automatically updated.

Dual Alarm Settings

Setting Alarm 1 or Alarm 2

- Press the '**Alarm**' button (Ref.5) to enter the Alarm Menu. Press once to enter Alarm 1, press again to enter Alarm 2. Alternatively, press and hold the **Info/Menu** button (Ref.1) for two seconds to open the 'Set Menu'. Use **PREV** or **NEXT** buttons (Ref.9/13) to find **Alarm 1 Set** or **Alarm 2 Set**, then press **SELECT** button (Ref.12) to enter the one you are about to set.
- To turn the selected Alarm **ON** or **OFF**, press **PREV** or **NEXT** to select your option then confirm with **SELECT** button (Ref.12). Set the selected Alarm to **ON** to activate the alarm setting.
- Next, set the alarm time using **PREV** or **NEXT** for hours and minutes, confirming each with **SELECT** button (Ref.12).
- Adjust the **alarm volume**, confirm, then set **the alarm ringtone**. You can choose to sound with **Alarm, DAB, or FM**. Confirm your selection with **SELECT** button (Ref.12).

- Set the **Alarm Mode (frequency)**, and choose in between: **Once, Daily, Weekdays or Weekends**. Press the **SELECT** button (Ref.12) to confirm your selection.
- Press **Info/Menu** to return to the previous step at any time, then follow these same steps to set the other alarm.

Turn Off, Cancel or Snooze

Turning Off the Alarm

- When the alarm sounds, press the **Power, Standby/Mode** button (Ref.2) to turn it off. Alternatively, press short the **Alarm** button (Ref.5).
- If the alarm is set to **Weekday, Weekend, or Daily**, the alarm icon will remain on the standby screen for the corresponding day.
- If the alarm is set to **Once**, the alarm icon will disappear after it sounds.

Cancelling an Alarm

- To cancel an alarm, when is not sounding, follow the steps to set the alarm. Instead of selecting the Alarm 1 or Alarm 2 to **ON**, set it to **OFF** using the **PREV or NEXT** buttons (Ref.9/13), press the **SELECT** button to confirm.

Pressing the Snooze Function

- When the alarm sounds, press **Snooze/ Sleep** button (Ref.10), to delay the alarm for 9 minutes. The radio will enter standby mode.
- To stop the snooze alarm or resume normal operation, press the **Power, Standby/Mode** button (Ref.1).

Please note:

When the alarm sounds, if no action is taken, it can last for up to one hour.

*If the alarm ringtone is set to **DAB** or **FM**, the radio will play the last played station in that mode.*

If the DAB or FM station has a weak signal, the alarm will default to the standard alarm ringtone instead of the radio station.

Settings: Sleep Timer

Ensure the unit is in working mode (i.e., listening to DAB/FM Radio ,BT).

- Press the **Snooze/Sleep** button (**Ref.10**) to enter Sleep Timer Menu.
- The screen will display '**Set Sleep: OFF**'. Use the **PREV** or **NEXT** buttons (**Ref.9/13**) to browse through the sleep timer options: 120, 90, 60, 45, 30, 15, 5 minutes, or OFF.
- Select your desired time frame from the options available. When this is displayed, press **the SELECT** button (**Ref.12**) to confirm and activate the sleep timer. The system will automatically start counting down.
- Once the timer is set, the remaining minutes will count down on the display. For example, if set for 5 minutes, '**S5**' will flash and countdown to '**S0**', at which point the radio will enter Standby mode.
- To turn the sleep timer off, repeat the above steps and select **OFF**.
- The Sleep Timer can also be set via Radio Menu.. Press and hold the **Info/Menu** button (**Ref.1**) for two seconds to open the **Set Menu**. Using the **PREV** or **NEXT** buttons search through the menu to find **Sleep Set Menu**.

Radio – ‘Set Menu’

- The Oakcastle DAB10 Radio **Set Menu** settings can be accessed in DAB, FM or Bluetooth mode.
- While in working mode (powered on), press and hold the **Info/Menu** button (Ref. 1) for two-three seconds to enter the **Set Menu**.
- Use the **PREV** and **NEXT** buttons (Ref.9/13) to scroll through the available options: **Time/Date**, **System Version**, **Factory Reset**, **Alarm 1 Set**, **Alarm 2 Set**, **Sleep Set**, **Full Scan** (available only in DAB mode), **Scan Setting** (available only in FM mode), and **Language**. Select an option by pressing the **SELECT** button (Ref. 12).

Time/Date, **Alarm 1 Set**, **Alarm 2 Set**, and **Sleep Set** are detailed on pages 11–13.

System Version

- Enter to view the radio's software version.

Factory Reset

- Select to perform a factory reset to resolve functionality issues.
- Choose **YES** to confirm with **SELECT** button (Ref.12), or **NO** to cancel.

Please note: A factory reset will restore the radio to its default settings and erase all saved settings. Once completed, you will need to add them again.

Language

- Enter to change the radio menu language.
- Select from **English**, **German**, **French**, **Italian**, **Spanish**, then confirm with **SELECT** button (Ref.12).

Observation	Potential Cause/Solution
No sound	The station is not tuned in properly. Please perform a rescan for available stations or manually scroll through available stations. Process a factory reset of the radio (view page 14)
Cannot preset stations	While playing the station you want to save, press and hold the Preset button for 2–3 seconds to open the Preset Store settings. If the list that appears does not show “ Preset Store ” at the top, press and hold the Preset button again to enter the store menu. Select a slot and press Enter to confirm.
FM: Static sound DAB: Burbling/intermittent cut-out	Signal reception is low. Adjust the aerial or move the unit to a stronger signal location. Perform a rescan. Re-scan stations and/or a factory reset.
Cannot locate DAB/DAB+ mode	FM mode is indicated by “FM” and the station frequency. DAB mode does not display “DAB+” on the screen. Instead, the first available DAB station name will display.
Desired station not found	Weak signal. Use the manual tune function and try rescanning in a different area.
Display shows “No Service”	There is no DAB coverage in your area, or poor reception. Adjust the position of the aerial, or move the unit to a stronger signal location.
Display is blank	This may occur if the broadcaster changes the label of a service or removes a label while tuned. The radio will try to retune or perform a scan.
Time and Date not setting automatically	To automatically set the time and date, turn on the system and switch to DAB radio. Alternatively, you can edit these in radio settings.

Specification

Power Supply	DC 5V 1A Power Input
Bluetooth Version	5.4 Range up to 10 metres
Modes	FM (87.5MHz-108MHz) DAB/DAB+ (174-240MHz)
Output Connector	3.5mm Earphone jack
No-load Power Consumption	0.07W
Average Active Efficiency	75.26%
Output	5.0V 1.0A 5.0W
Input	1 00-240V~, 50-60Hz, 0.2A Max.
Weight	1kg
Dimensions	19 x 12 x 12 cm

Do you still have issues? Contact Tech Support

If you require further assistance with your Oakcastle product, please contact our team on the Oakcastle website: www.oakcastle.co.uk/support or email us @ techsupport@oakcastle.co.uk

Warranty

All products come with a standard 12-month warranty. To extend your warranty to a total of three years, you must register your product within 30 days of purchase at www.oakcastle.co.uk. Simply navigate to the menu and select 'Register Your Product'. This service is completely free of charge.

Warning & Safety Information

EN Safety and Usage Guidelines (All where applicable)

General Safety Information - Read and Retain: Review all safety and operating instructions before use; keep them for future reference. **Follow Instructions:** Adhere strictly to all safety and operational guidelines. **Water Exposure:** Keep the device away from water; avoid placing liquids near it. **Ventilation:** Ensure ventilation openings are unobstructed to prevent overheating. **Heat Sources:** Keep the device away from heat-emitting appliances. **Wall Mounting - Installation Safety:** Follow the manufacturer's instructions and use approved mounting kits only. Avoid drilling into areas with cables, gas, or water lines. Use proper tools and safety apparatus. **Regular Maintenance:** Inspect regularly for wear or damage, especially if wall-mounted. **Relocation:** Detach from the wall mount before moving. **Child Safety:** Keep out of children's reach and ensure heavy items are securely mounted. **Seismic Precautions:** Use specialized mounts in earthquake-prone areas. **Electrical Safety - Power Source:** Use the specified power source; consult an electrician if unsure. **Cable Management:** Protect the power cord from damage. **Power Disconnection:** Keep the main plug accessible; unplug during storms or long periods of non-use. **Battery Safety - Charging:** Use the manufacturer's charger; avoid extreme conditions. **Heat Exposure:** Keep batteries away from heat to prevent explosion or leakage. **Battery Condition:** Discontinue use if the battery is damaged; dispose of it properly. **Replacement:** Only use recommended batteries; incorrect types can cause hazards. **External Batteries:** Use only specified types, observing correct polarity. **Battery Removal:** Remove batteries if not used for an extended period. **Disposal:** Follow local regulations for battery disposal; do not incinerate. **Connectivity Safety - Cable Connections:** Power off devices before connecting or disconnecting cables. **Bluetooth Pairing:** Ensure a secure connection; avoid interference from other devices. **Volume Control:** Keep volume moderate to prevent hearing damage. **Connectivity and Data Security - Wireless Security:** Review privacy policies and secure your network. **Software Updates:** Keep software updated for security and performance. **Children's Safety Warnings - Product Use:** Intended for adults; keep away from children. **Battery Warning:** Keep batteries and items containing batteries out of children's reach. **Volume Control:** Maintain a safe volume level to protect children's hearing. **Fire Hazard - Flammable Materials:** Do not place open flames near the product. **Overheating:** Avoid covering the product to prevent overheating and fire risks. **Disposal and Recycling - Product Disposal:** Dispose of at a recycling centre according to local laws. **Environmental Compliance:** Follow regulations for battery and electronic waste disposal. **User Maintenance - Cleaning:** Unplug before cleaning; use a dry cloth only. **Servicing:** Only qualified personnel should perform repairs. **Data Protection:** Reset to factory settings before returning or disposing of the product. **Disclaimer:** Failure to follow these instructions may result in injury, death, or property damage. The manufacturer is not liable for damage caused by improper use.

DE Sicherheits- und Verwendungsrichtlinien (alle, wo zutreffend)

Allgemeine Sicherheitsinformationen - Lesen und Aufbewahren: Überprüfen Sie alle Sicherheits- und Bedienungsanleitungen vor der Verwendung; bewahren Sie diese für zukünftige Referenz auf. **Befolgen Sie die Anweisungen:** Halten Sie sich strikt an alle Sicherheits- und Betriebsrichtlinien. **Wasserexposition:** Halten Sie das Gerät fern von Wasser; vermeiden Sie das Platzen von Flüssigkeiten in der Nähe. **Belüftung:** Stellen Sie sicher, dass die Belüftungsöffnungen nicht blockiert sind, um Überhitzung zu vermeiden. **Wärmequellen:** Halten Sie das Gerät fern von wärmeabstrahlenden Geräten. **Wandmontage - Sicherheit bei der Installation:** Befolgen Sie die Anweisungen des Herstellers und verwenden Sie nur zugelassene Montagesätze. Vermeiden Sie das Bohren in Bereiche mit Kabeln, Gas- oder Wasserleitungen. Verwenden Sie geeignete Werkzeuge und Sicherheitsausrüstung. **Regelmäßige Wartung:** Überprüfen Sie regelmäßig auf Abnutzung oder Beschädigungen, insbesondere bei Wandmontage. **Umzug:** Lösen Sie das Gerät von der Wandhalterung, bevor Sie es bewegen. **Kindersicherheit:** Halten Sie das Gerät außerhalb der Reichweite von Kindern und stellen Sie sicher, dass schwere Gegenstände sicher montiert sind. **Vorkehrungen bei Erdbeben:** Verwenden Sie in erdbebengefährdeten Gebieten spezielle Halterungen. **Elektrische Sicherheit - Stromquelle:** Verwenden Sie die angegebene Stromquelle; konsultieren Sie einen Elektriker, wenn Sie unsicher sind. **Kabelmanagement:** Schützen Sie das Stromkabel vor Beschädigungen. **Stromtrennung:** Halten Sie den Hauptstecker zugänglich; ziehen Sie den Stecker bei Gewittern oder längerer Nichtbenutzung heraus. **Batteriesicherheit - Laden:** Verwenden Sie das vom Hersteller bereitgestellte Ladegerät; vermeiden Sie extreme Bedingungen. **Wärmeexposition:** Halten Sie Batterien fern von Hitze, um Explosionen oder Auslaufen zu verhindern. **Batteriezustand:** Bei Beschädigungen die Nutzung einstellen; ordnungsgemäß entsorgen. **Ersatz:** Verwenden Sie nur empfohlene Batterien; falsche Typen können Gefahren verursachen. **Externe Batterien:** Verwenden Sie nur spezifizierte Typen und beachten Sie die korrekte Polarität. **Batterieentfernung:** Entfernen Sie Batterien bei längerer Nichtbenutzung. **Entsorgung:** Befolgen Sie lokale Vorschriften zur Batterieentsorgung; nicht verbrennen. **Verbindungssicherheit - Kabelverbindungen:** Schalten Sie Geräte vor dem Verbinden oder Trennen von Kabeln aus. **Bluetooth-Kopplung:** Stellen Sie eine sichere Verbindung her; vermeiden Sie Störungen durch andere Geräte. **Lautstärkeregelung:** Halten Sie die Lautstärke moderat, um Hörschäden zu vermeiden. **Verbindungs- und Datensicherheit - WLAN-Sicherheit:** Überprüfen Sie die Datenschutzrichtlinien und sichern Sie Ihr Netzwerk. **Software-Updates:** Halten Sie die Software für Sicherheit und Leistung aktuell. **Sicherheitswarnungen für Kinder - Produktnutzung:** Nur für Erwachsene bestimmt; von Kindern fernhalten. **Batteriewarning:** Halten Sie Batterien und Produkte mit Batterien außerhalb der Reichweite von Kindern. **Lautstärkeregelung:** Halten Sie die Lautstärke zum Schutz des Gehörs von Kindern sicher. **Brandgefahr - Entflammbare Materialien:** Stellen Sie keine offenen Flammen in die Nähe des Produkts. **Überhitzung:** Decken Sie das Produkt nicht ab, um Überhitzung und Brandgefahr zu vermeiden. **Entsorgung und Recycling - Produktentsorgung:** Entsorgen Sie das Produkt gemäß den lokalen Vorschriften in einem Recyclingzentrum. **Umweltkonformität:** Befolgen Sie die Vorschriften zur Entsorgung von Batterien und Elektronikabfall. **Benutzerwartung - Reinigung:** Vor der Reinigung vom Stromnetz trennen; nur ein trockenes Tuch verwenden. **Wartung:** Reparaturen nur von qualifiziertem Personal durchführen lassen. **Datenschutz:** Setzen Sie das Gerät vor Rückgabe oder Entsorgung auf Werkseinstellungen zurück. **Haftungsausschluss:** Die Nichtbeachtung dieser Anweisungen kann zu Verletzungen, Tod oder Sachschäden führen. Der Hersteller haftet nicht für Schäden, die durch unsachgemäße Nutzung verursacht werden.



FR Consignes de Sécurité et d'Utilisation (toutes celles applicables)

Informations Générales de Sécurité - Lire et Conserver : Consultez toutes les consignes de sécurité et d'utilisation avant usage ; conservez-les pour référence future. **Suivre les Instructions :** Respectez strictement toutes les consignes de sécurité et d'utilisation. **Exposition à l'Eau :** Gardez l'appareil à l'écart de l'eau ; évitez de placer des liquides à proximité. **Ventilation :** Assurez-vous que les ouvertures de ventilation ne sont pas obstruées pour éviter la surchauffe. **Sources de Chaleur :** Tenez l'appareil à l'écart des appareils émettant de la chaleur. **Fixation Murale - Sécurité de l'Installation :** Suivez les instructions du fabricant et n'utilisez que les kits de montage approuvés. Évitez de percer des zones contenant des câbles, des conduites de gaz ou d'eau. Utilisez des outils et équipements de sécurité appropriés. **Entretien Régulier :** Inspectez régulièrement l'appareil pour détecter tout signe d'usure ou de dommage, en particulier s'il est fixé au mur. **Repositionnement :** Détachez l'appareil du support mural avant de le déplacer. **Sécurité des Enfants :** Gardez l'appareil hors de portée des enfants et assurez-vous que les objets lourds sont solidement fixés. **Précautions Sismiques :** Utilisez des supports spécialisés dans les zones sujettes aux tremblements de terre. **Sécurité Électrique - Source d'Alimentation :** Utilisez la source d'alimentation spécifiée ; consultez un électricien en cas de doute. **Gestion des Câbles :** Protégez le cordon d'alimentation contre les dommages. **Déconnexion de l'Alimentation :** Gardez la prise principale accessible ; débranchez en cas d'orage ou de non-utilisation prolongée. **Sécurité des Piles - Recharge :** Utilisez le chargeur du fabricant ; évitez les conditions extrêmes. **Exposition à la Chaleur :** Gardez les piles à l'écart de la chaleur pour éviter l'explosion ou les fuites. **État de la Pile :** Cessez l'utilisation si la pile est endommagée ; jetez-la correctement. **Remplacement :** N'utilisez que les piles recommandées ; des types incorrects peuvent causer des dangers. **Piles Externes :** Utilisez uniquement les types spécifiés, en respectant la polarité. **Retrait des Piles :** Retirez les piles si l'appareil n'est pas utilisé pendant une longue période. **Élimination :** Suivez les réglementations locales pour l'élimination des piles ; ne les incinerez pas. **Sécurité de la Connectivité - Connexions de Câbles :** Éteignez les appareils avant de connecter ou de déconnecter des câbles. **Appareillage Bluetooth :** Assurez-vous d'une connexion sécurisée ; évitez les interférences avec d'autres appareils. **Contrôle du Volume :** Maintenez un volume modéré pour éviter les dommages auditifs. **Sécurité de la Connectivité et des Données - Sécurité du Réseau Sans Fil :** Examinez les politiques de confidentialité et sécurisez votre réseau. **Mises à Jour Logicielles :** Gardez le logiciel à jour pour la sécurité et la performance. **Avertissements de Sécurité pour les Enfants - Utilisation du Produit :** Destiné aux adultes ; gardez hors de portée des enfants. **Avertissement sur les Piles :** Gardez les piles et les articles contenant des piles hors de portée des enfants. **Contrôle du Volume :** Maintenez un niveau sonore sûr pour protéger l'audition des enfants. **Risque d'Incendie - Matériaux Inflammables :** Ne placez pas de flammes nues près du produit. **Surchauffe :** Évitez de couvrir le produit pour prévenir la surchauffe et les risques d'incendie. **Élimination et Recyclage - Élimination du Produit :** Déposez-le dans un centre de recyclage conformément aux lois locales. **Conformité Environnementale :** Suivez les réglementations concernant l'élimination des piles et des déchets électroniques. **Entretien de l'Utilisateur - Nettoyage :** Débranchez avant de nettoyer ; utilisez uniquement un chiffon sec. **Réparations :** Seul le personnel qualifié doit effectuer les réparations. **Protection des Données :** Réinitialisez aux paramètres d'usine avant de retourner ou d'éliminer le produit. **Clause de Non-Responsabilité -** Le non-respect de ces consignes peut entraîner des blessures, la mort ou des dommages matériels. Le fabricant décline toute responsabilité en cas de dommages causés par une mauvaise utilisation.

ES Guías de Seguridad y Uso (Cuando sea aplicable)

Información General de Seguridad - Leer y Conserver : Revise todas las instrucciones de seguridad y operación antes de usar; guárdelas para referencia futura. **Seguir las Instrucciones :** Cumpla estrictamente con todas las guías de seguridad y operativas. **Exposición al Agua :** Mantenga el dispositivo alejado del agua ; evite colocar líquidos cerca de él. **Ventilación :** Asegúrese de que las aberturas de ventilación no estén obstruidas para evitar el sobrecalentamiento. **Fuentes de Calor :** Mantenga el dispositivo alejado de aparatos que emitan calor. **Montaje en Pared - Seguridad de Instalación :** Siga las instrucciones del fabricante y use solo kits de montaje aprobados. Evite perforar áreas con cables, gas o tuberías de agua. Use herramientas y equipos de seguridad adecuados. **Mantenimiento Regular :** Inspeccione regularmente para detectar desgaste o daños, especialmente si está montado en la pared. **Reubicación :** Desmonte del soporte de pared antes de moverlo. **Seguridad Infantil :** Manténgalo fuera del alcance de los niños y asegúrese de que los objetos pesados estén montados de forma segura. **Precauciones Sísmicas :** Use soportes especializados en áreas propensas a terremotos. **Seguridad Eléctrica - Fuente de Energía :** Use la fuente de energía especificada ; consulte a un electricista si tiene dudas. **Gestión de Cables :** Proteja el cable de alimentación contra daños. **Desconexión de Energía :** Mantenga el enchufe principal accesible ; desenchufe durante tormentas o largos periodos de inactividad. **Seguridad de las Baterías - Carga :** Use el cargador del fabricante ; evite condiciones extremas. **Exposición al Calor :** Mantenga las baterías alejadas del calor para evitar explosiones o fugas. **Estado de la Batería :** Deje de usarla si la batería está dañada ; deséchela adecuadamente. **Reemplazo :** Use solo las baterías recomendadas ; tipos incorrectos pueden causar peligros. **Baterías Externas :** Use solo los tipos especificados, respetando la polaridad correcta. **Retiro de Baterías :** Retire las baterías si no se usa durante un período prolongado. **Eliminación :** Siga las normativas locales para la eliminación de baterías ; no las incinere. **Seguridad de Conectividad - Conexiones de Cables :** Apague los dispositivos antes de conectar o desconectar cables. **Emparejamiento Bluetooth :** Asegure una conexión segura ; evite interferencias de otros dispositivos. **Control de Volumen :** Mantenga un volumen moderado para prevenir daños auditivos. **Seguridad de Conectividad y Datos - Seguridad de Red inalámbrica :** Revise las políticas de privacidad y asegure su red. **Actualizaciones de Software :** Mantenga el software actualizado para la seguridad y el rendimiento. **Advertencias de Seguridad para Niños - Uso del Producto :** Destinado a adultos ; manténgalo fuera del alcance de los niños. **Advertencia sobre Baterías :** Mantenga las baterías y los artículos que contienen baterías fuera del alcance de los niños. **Control de Volumen :** Mantenga un nivel de volumen seguro para proteger la audición de los niños. **Riesgo de Incendio - Materiales Inflammables :** No coloque llamas abiertas cerca del producto. **Sobrecalentamiento :** Evite cubrir el producto para prevenir sobrecalentamientos y riesgos de incendio. **Eliminación y Reciclaje - Eliminación del Producto :** Deséchelo en un centro de reciclaje según las leyes locales. **Cumplimiento Ambiental :** Siga las normativas para la eliminación de baterías y desechos electrónicos. **Mantenimiento del Usuario - Limpieza :** Desenchufe antes de limpiar ; use solo un paño seco. **Reparaciones :** Solo personal calificado debe realizar reparaciones. **Protección de Datos :** Restablezca a la configuración de fábrica antes de devolver o desechar el producto. **Descarga de Responsabilidad :** El incumplimiento de estas instrucciones puede resultar en lesiones, muerte o daños a la propiedad. El fabricante no se hace responsable de los daños causados por un uso inadecuado.

Warning & Safety Information

IT Linee Guida per la Sicurezza e l'Uso (Quando Applicabile)

Informazioni Generali sulla Sicurezza - Leggere e Conservare: Rivedere tutte le istruzioni di sicurezza e di funzionamento prima dell'uso; conservarle per riferimenti futuri. **Seguire le Istruzioni:** Attenersi rigorosamente a tutte le linee guida di sicurezza e operative. **Esposizione all'Acqua:** Tenere il dispositivo lontano dall'acqua; evitare di posizionare liquidi nelle vicinanze. **Ventilazione:** Assicurarsi che le aperture di ventilazione non siano ostruite per evitare il surriscaldamento. **Fonti di Calore:** Tenere il dispositivo lontano da apparecchi che emettono calore. **Montaggio a Parete - Sicurezza dell'Installazione:** Seguire le istruzioni del produttore e utilizzare solo kit di montaggio approvati. Evitare di perforare aree con cavi, gas o tubazioni d'acqua. Utilizzare strumenti e dispositivi di sicurezza adeguati. **Manutenzione Regolare:** Ispezionare regolarmente per verificare l'usura o i danni, soprattutto se montato a parete. **Rilocazione:** Staccare dal supporto a parete prima di spostare. **Sicurezza dei Bambini:** Tenere fuori dalla portata dei bambini e assicurarsi che gli oggetti pesanti siano montati in modo sicuro. **Precauzioni Sismiche:** Utilizzare supporti specializzati nelle zone soggette a terremoti. **Sicurezza Elettrica - Fonte di Alimentazione:** Usare la fonte di alimentazione specificata; consultare un elettricista in caso di dubbi. **Gestione dei Cavi:** Proteggere il cavo di alimentazione da danni. **Disconnessione dell'Energia:** Mantenere la spina principale accessibile; scollegare durante i temporali o in caso di lunghi periodi di inattività. **Sicurezza della Batteria - Carica:** Utilizzare il caricatore del produttore; evitare condizioni estreme. **Esposizione al Calore:** Tenere le batterie lontane dal calore per evitare esplosioni o perdite. **Condizioni della Batteria:** Interrompere l'uso se la batteria è danneggiata; smaltirla correttamente. **Sostituzione:** Usare solo batterie raccomandate; tipi errati possono causare pericoli. **Batterie Esterne:** Utilizzare solo i tipi specificati, osservando la polarità corretta. **Rimozione della Batteria:** Rimuovere le batterie se non utilizzate per un periodo prolungato. **Smaltimento:** Seguire le normative locali per lo smaltimento delle batterie; non incenerirle. **Sicurezza della Connettività - Conessioni dei Cavi:** Spegnerle i dispositivi prima di collegare o scollegare i cavi. **Accoppiamento Bluetooth:** Assicurare una connessione sicura; evitare interferenze da altri dispositivi. **Controllo del Volume:** Mantenere un volume moderato per prevenire danni all'udito. **Sicurezza della Connettività e dei Dati - Sicurezza della Rete Wireless:** Rivedere le politiche sulla privacy e proteggere la propria rete. **Aggiornamenti Software:** Mantenere il software aggiornato per la sicurezza e le prestazioni. **Avvertenze di Sicurezza per Bambini - Uso del Prodotto:** Destinato agli adulti; tenere lontano dai bambini. **Avvertenza sulla Batteria:** Tenere le batterie e gli oggetti contenenti batterie fuori dalla portata dei bambini. **Controllo del Volume:** Mantenere un livello di volume sicuro per proteggere l'udito dei bambini. **Rischio di Incendio - Materiali Infiammabili:** Non posizionare fiamme libere vicino al prodotto. **Surriscaldamento:** Evitare di coprire il prodotto per prevenire surriscaldamenti e rischi di incendio. **Smaltimento e Riciclaggio - Smaltimento del Prodotto:** Smaltire in un centro di riciclaggio secondo le leggi locali. **Conformità Ambientale:** Seguire le normative per lo smaltimento delle batterie e dei rifiuti elettronici. **Manutenzione dell'Utente - Pulizia:** Scollegare prima della pulizia; utilizzare solo un panno asciutto. **Riparazioni:** Solo personale qualificato deve eseguire le riparazioni. **Protezione dei Dati:** Ripristinare le impostazioni di fabbrica prima di restituire o smaltire il prodotto. **Disclaimer:** Il mancato rispetto di queste istruzioni può causare lesioni, morte o danni materiali. Il produttore non è responsabile per danni causati da un uso improprio.

NL Veiligheids- en Gebruiksrichtlijnen (Waar van Toepassing)

Algemene Veiligheidsinformatie - Lezen en Bewaren: Lees alle veiligheids- en gebruiksinstructies voor gebruik; bewaar ze voor toekomstig gebruik. **Volg Instructies:** Houd u strikt aan alle veiligheids- en operationele richtlijnen. **Waterblootstelling:** Houd het apparaat uit de buurt van water; vermijd het plaatsen van vloeistoffen in de buurt. **Ventilatie:** Zorg ervoor dat de ventilatieopeningen niet geblokkeerd zijn om oververhitting te voorkomen. **Warmtebronnen:** Houd het apparaat uit de buurt van warmteafgevend apparaten. **Muurbevestiging - Installatieveiligheid:** Volg de instructies van de fabrikant en gebruik alleen goedgekeurde bevestigingssets. Vermijd boren in gebieden met kabels, gas- of waterleidingen. Gebruik geschikte gereedschappen en veiligheidsapparatuur. **Regelmatig Onderhoud:** Inspecteer regelmatig op slijtage of schade, vooral als het aan de muur is bevestigd. **Verplaatsing:** Maak los van de muurbevestiging voordat u het verplaatst. **Kindveiligheid:** Houd buiten het bereik van kinderen en zorg ervoor dat zware voorwerpen veilig zijn gemonteerd. **Seismische Voorzorgsmaatregelen:** Gebruik gespecialiseerde bevestigingen in aardbevingsgevoelige gebieden. **Elektrische Veiligheid - Stroomvoorziening:** Gebruik de gespecificeerde stroombron; raadpleeg een elektricien bij twijfel. **Kabelbeheer:** Bescherm het netsnoer tegen beschadiging. **Stroomuitschakeling:** Zorg ervoor dat de hoofdstekker toegankelijk blijft; trek de stekker uit tijdens onweer of lange perioden van niet-gebruik. **Batterijveiligheid Opladen:** Gebruik de oplader van de fabrikant; vermijd extreme omstandigheden. **Hittesensitiviteit:** Houd batterijen uit de buurt van hitte om explosie of lekkage te voorkomen. **Batterijconditie:** Stop met het gebruik als de batterij beschadigd is; gooi deze op de juiste manier weg. **Vervanging:** Gebruik alleen aanbevolen batterijen; onjuiste types kunnen gevaar opleveren. **Externe Batterijen:** Gebruik alleen gespecificeerde types, met inachtneming van de juiste polariteit. **Verwijderen van Batterijen:** Verwijder batterijen als ze voor langere tijd niet worden gebruikt. **Afvalverwerking:** Volg de lokale voorschriften voor het weggooiën van batterijen; verbrand ze niet. **Verbindingsveiligheid - Kabel aansluitingen:** Schakel apparaten uit voordat u kabels aansluit of loskoppelt. **Bluetooth-koppeling:** Zorg voor een veilige verbinding; vermijd interferentie van andere apparaten. **Volume-regeling:** Houd het volume gematigd om gehoorschadiging te voorkomen. **Verbindings en Gegevensbeveiliging - Draadloze Beveiliging:** Controleer het privacybeleid en beveilig uw netwerk. **Software-updates:** Houd de software up-to-date voor veiligheid en prestaties. **Waarschuwingen voor Kindveiligheid - Productgebruik:** Bedoeld voor volwassenen; houd uit de buurt van kinderen. **Batterijwaarschuwing:** Houd batterijen en voorwerpen met batterijen buiten het bereik van kinderen. **Volume-regeling:** Houd een veilig volume om het gehoor van kinderen te beschermen. **Brandgevaar - Ontvlambare Materialen:** Plaats geen open vuur in de buurt van het product. **Oververhitting:** Bedek het product niet om oververhitting en brandrisico's te voorkomen. **Afvalverwerking en Recycling - Productafval:** Verwijder het bij een recyclingcentrum volgens de lokale wetgeving. **Milieu-naleving:** Volg de voorschriften voor het weggooiën van batterijen en elektronisch afval. **Gebruikersonderhoud - Schoonmaak:** Trek de stekker uit voordat u schoonmaakt; gebruik alleen een droge doek. **Onderhoud:** Alleen gekwalificeerd personeel mag reparaties uitvoeren. **Gegevensbescherming:** Stel terug naar de fabrieksinstellingen voordat u het product retourneert of weggooit. **Disclaimer:** Het niet volgen van deze instructies kan leiden tot letsel, overlijden of materiële schade. De fabrikant is niet aansprakelijk voor schade veroorzaakt door onjuist gebruik.



Declaration of Conformity:

We, Izilla Ltd, Newton House, 2 Pioneer Court, Histon, Cambridge, CB24 9PT declare under our sole responsibility that the product:

Product Name: DAB10 Radio **Model:** 1000003129 **Brand Name:** Oakcastle

To which this declaration referred is in conformity to the following harmonized standards or normative documents (CE & Rohs 2.0) ;

EN 55035:2017, EN 55032:2015, EN61000-3-2:2014, EN61000-3-3:2013, EEN62368-1:2004+A11:2017, ETSI EN 301 489-1 V2.2.3(2019-11), ETSI EN 301 489-17, V3.2.2(2019-12), ETSI EN 300 328 V2.2.2 (2019-07), EN 62479: 2010, IEC 62321-3-1:2013, IEC 62321-4:2013, IEC 62321-5:2013, IEC 62321-6:2015, IEC 62321-7-1:2015, IEC 62321-7-2:2017, IEC 62321-8:2017, (EC)NO 1275/2008, EN50564:2011, (EC)NO 801/2013.

Complying with the requirements or provisions of Council Directives which relate to:

EMC Directive 2014/30/EU, RED Directive 2014/53/EU, LVD Directive 2014/35/EU, Directive (2011/65/EU) and its amendment directives 2015/863/EU (RoHS 2.0) of the European parliament, ERP Directive 2009/125/EC.

All essential test suites have been carried out.

Point of Contact: Eddie Latham | Founder

Signed: *E. Latham* **Date of Issue:** January 2024 **Place of Issue:** Cambridge, UK

Importer's Addresses:

UK: iZilla Ltd, Newton House, 2 Pioneer Court, Histon, Cambridge, CB24 9PT

Email: info@oakcastle.co.uk

EU RP: AR Experts, Po Box 5047, 3620 AA Breukelen, The Netherlands

Email: info@ar-experts.eu

US: iZilla Ltd C/O A.N.Deringer Inc, 19520 Wilmington Ave, Rancho Dominguez, CA, 90220

Email: info@oakcastle.co.uk



ATTENTION

RISK OF ELECTRIC SHOCK DO
NOT OPEN



CAUTION

 
RISQUE D'ELECTROCUTION NE
PAS OUVRIR



IMPORTANT: Please read all instructions carefully before use and keep for future reference



OAKCASTLE

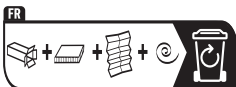

Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !



WWW.OAKCASTLE.CO.UK